





35

31

## 38烫画机/MODEL. 38 HEAT TRANSFER MACHINE

序号/NO.	名称	PARTS NAME	QTY
1	主架	machine frame	1
2	下面板	lower board	1
3	硅胶垫	Silicon mat	1
4	高温布	high-temperature cloth	1
5	M4X7十字螺丝	M4X7 screw	22
6	铁片	metal plate	3
7	加热板	hot board	1
8	上盖板	Upper board	1
9	M4X8十字螺丝	M4X8 screw	4
10	加热板支架	hot-board stand	1
11	M10X20外六角螺丝	M10X20 outer hexagon screw	5
12	手摆	metal handle	1
13	手柄	Form handle	1
14	销子加长NO. 1	bar NO. 1	1
15	M6X12十字螺丝	M6X12 screw	2
16	销子长NO. 2	bar NO. 2	1
17	M6X12十字螺丝	M6X12 screw	1
18	M10螺帽	M10 nut	1
19	外壳	machine shell	1
20	智能温控器	digital thermostat	1
21	后盖板	Back plate	1
22	M4X8十字螺丝	M4X8 screw	6
23	护线圈	retaining coil	1
24	压力调节旋钮	pressure adjusting knob	1
25	调节杆螺丝	adjustment screw rod	1
26	调节支架	adjust bracket	1
27	销子中NO. 3	bar NO. 3	1
28	卡簧	clamp spring	2
29	铁片	metal plate	1
30	M12螺帽	M12 nut	1
31	交流接触器	AC contactor	1
32	销子短NO. 4	bar NO. 4	1
33	M6X12十字螺丝	M6X12 screw	1
34	接触器板	contactless board	1
35	微动开关	micro switch	1
36	M3X12十字螺丝	M3X12 screw	2
37	M10X20外六角螺丝	M10X20 outer hexagon screw	2
38	拉簧	big spring	2
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			
50			